


Builder Kit Assembly Instructions



TheCOM
9903 Shooting Star Ct.
Nampa, Idaho 83687
(208) 779-2891

info@utvcom.com

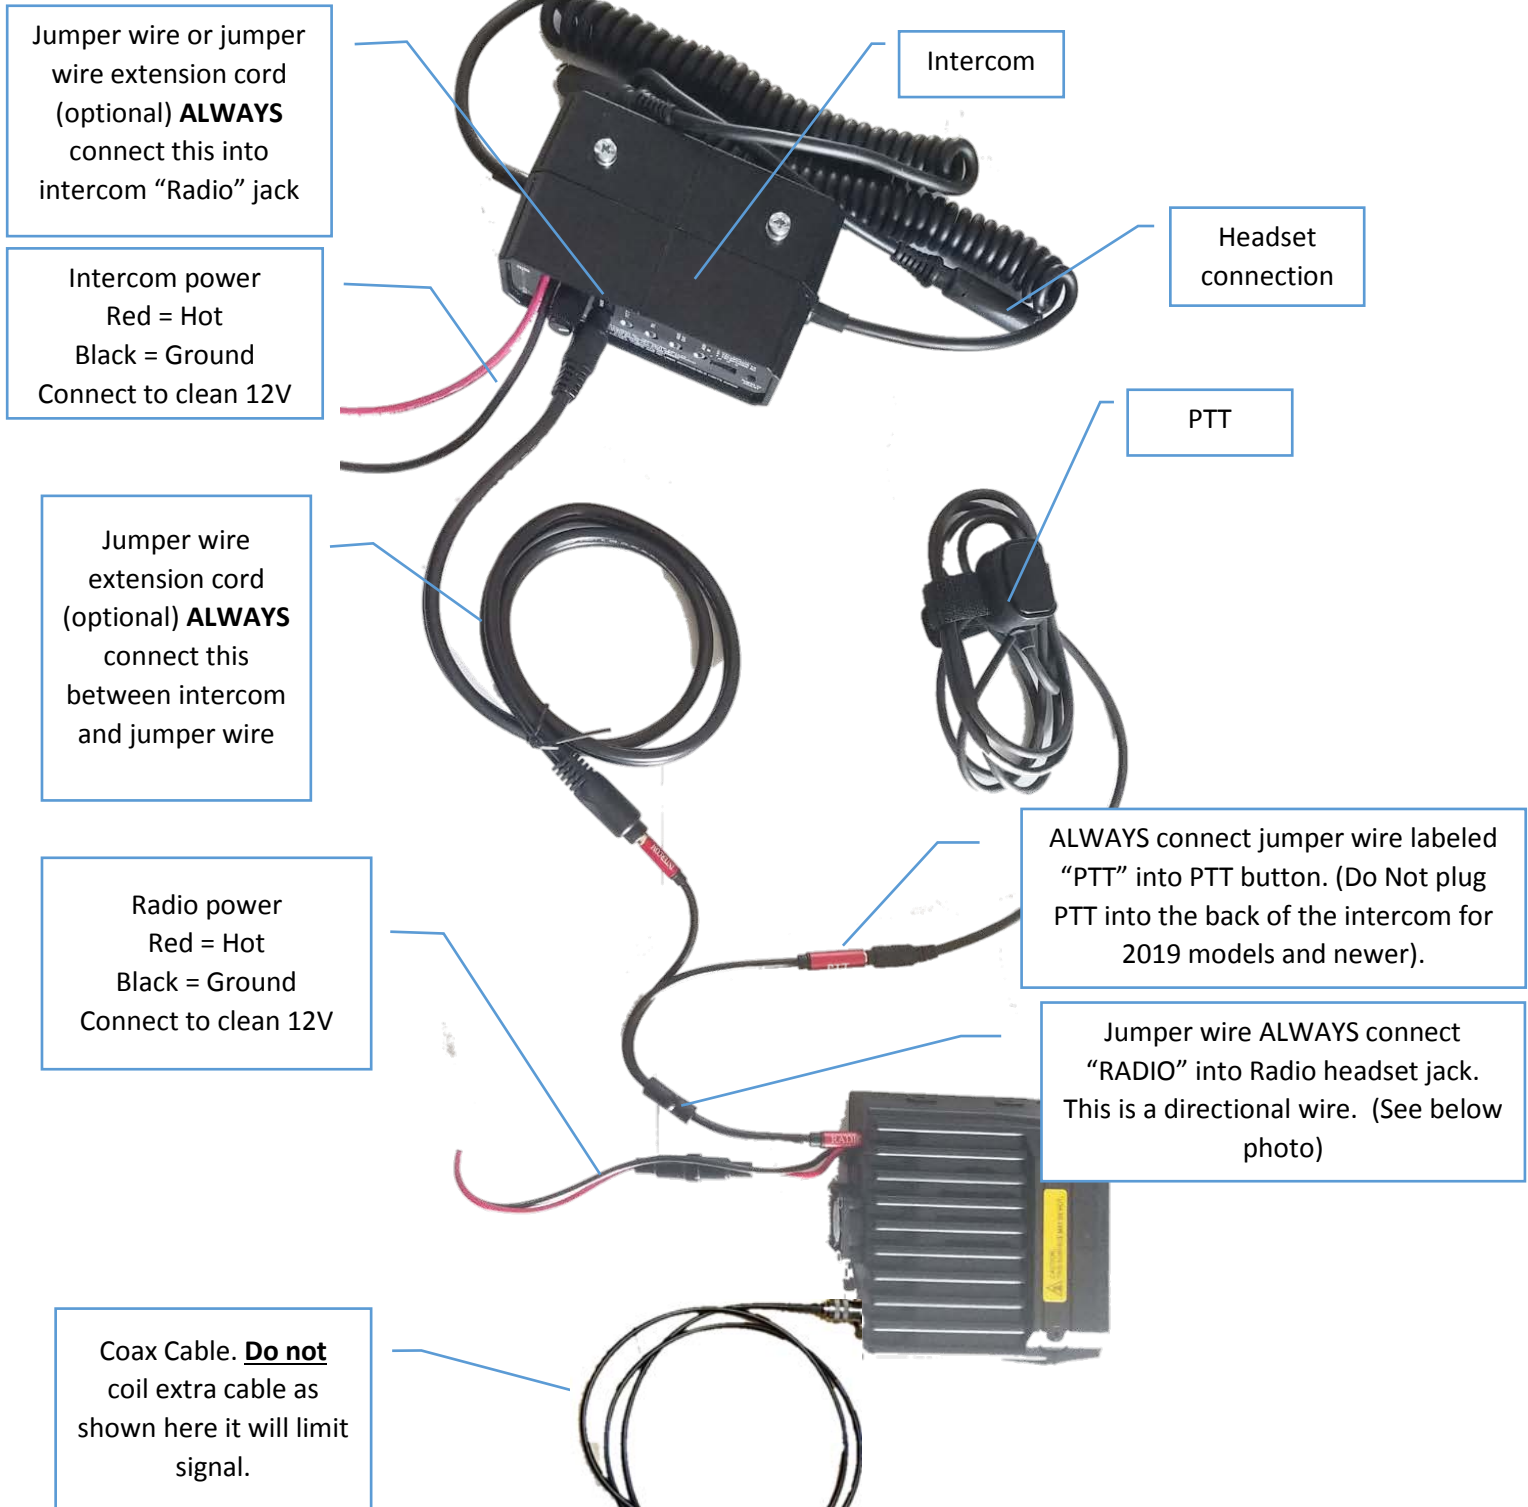


Jumper wire extension cord (optional) is to allow the intercom or radio to be separated. **ALWAYS** connect extension cord between intercom and jumper wire as shown

ALWAYS connect jumper wire labeled "INTERCOM" into intercom radio jack or into jumper wire extension cord (optional).

ALWAYS connect jumper wire labeled "PTT" into PTT button. (Do Not plug PTT into the back of the intercom for 2019 models and newer).

ALWAYS connect jumper wire "RADIO" into Radio headset jack. This is a directional wire.as shown here

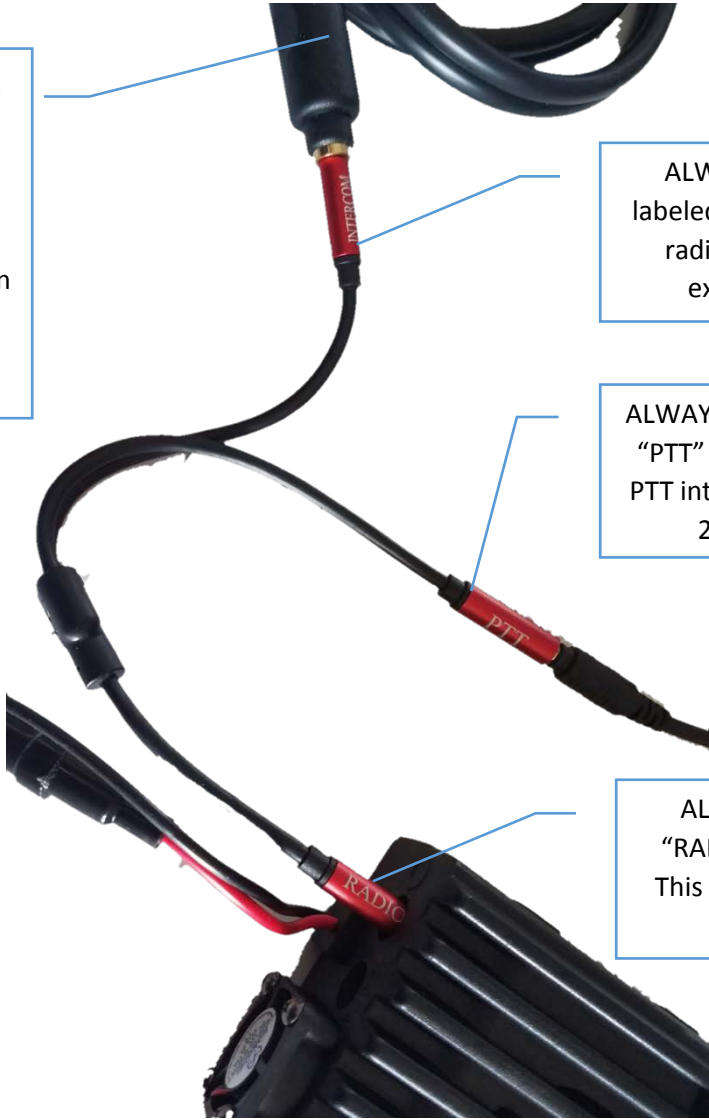

If using our noise filter:

- **Blue** wire is "Clean Hot (positive)" and should connect to the Radio and Intercom "Red" wire
- **Red** wire on noise filter will connect to the positive source (battery, ACC or other positive source)
- **Black** wire on noise filter will connect to the negative or good ground along with the ground of the radio and intercom.