1. Install the intercom first.
    a. Slide the intercom forward and make it plumb with the bracket so it sticks out of the face plate to the desired distance (we like it to stick out about ¼”).

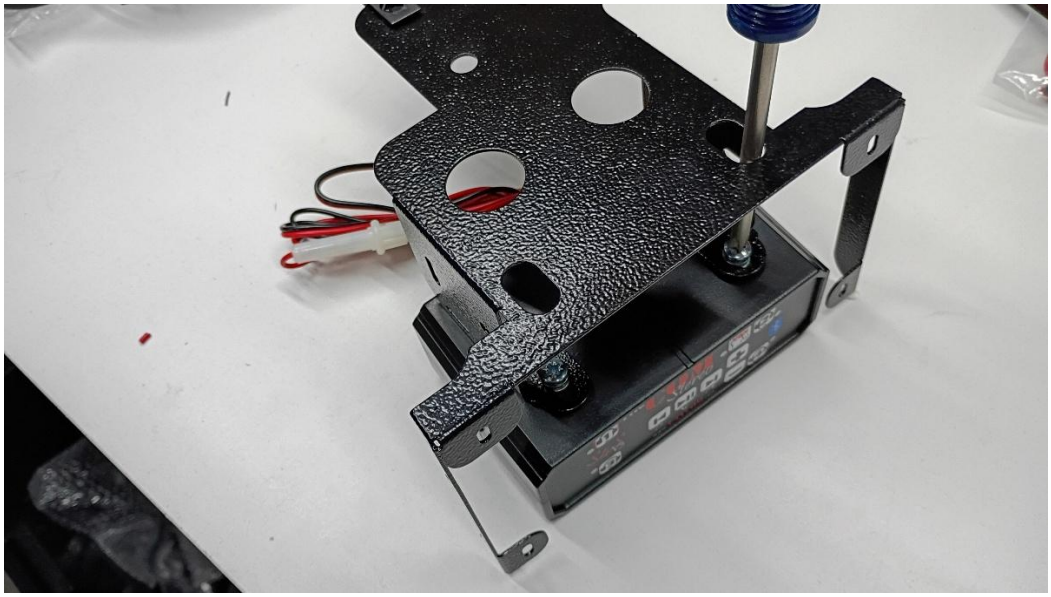

2. Install the radio with the 4 stock black screws

3. Install the noise filter with the 4 aluminum provided pop rivets

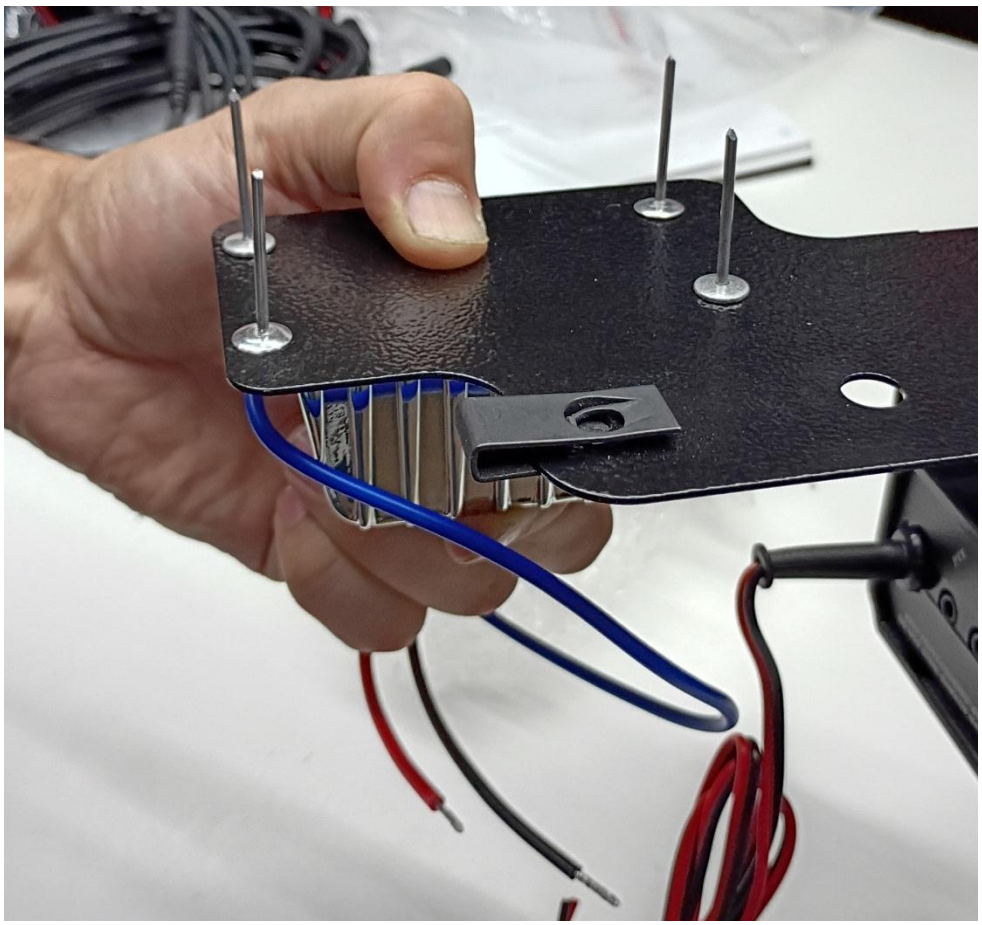

4. Install the face plate with the 4 stainless steel provided pop rivets

5. Install the neoprene so it rounds up against the face plate and covers all 3 sides.

UTVCOM.com
208-779-2891

6. To wire the COM it is best to watch this video or scan code: https://youtu.be/WMd9DeTNBL4?si=x4i7IuNnmzMOpCBt